



Managed Desktop Service BIOS Settings & Notes

Dell Optiplex 990

Version 1

To enter the BIOS settings utility press the **F2** key when the splash screen is displayed.

You can use the mouse to navigate around and select.

Load Defaults

Settings

[-]System Configuration

Integrated NIC Enabled w/ PXE

SATA Operation ATA

SMART Reporting [√]Enable Smart Reporting

[-]General

Boot Sequence []Diskette Drive [Onboard NIC]
 []USB Storage Device [Hard Disk Drive Model]
 []CD/DVD/CD-RW Device
 [√]Onboard NIC
 [√]Hard Disk Drive Model

Note: Hard Disk Drive Model may be a series of letters and numbers etc.

[-]Security

Admin Password xxxxxxxxx
Admin Setup Lockout [√]Enable Admin Setup Lockout

[-]Post Behaviour

POST HotKeys []Enable F12 Boot Option Menu

Apply

Exit

Additional Information:

- Users can change the type of audio input on the back by using the **Change Rear Audio Input Type** utility found on start menu at: **Programs → Accessories → System Tools**.
- These models require **version 2.5** or later of the **re-image CD**.
- To use the re-image disk you need to change the boot sequence such that the **CD/DVD/CD-RW Device** is enabled and at the top of the sequence. Remember to restore the boot sequence settings as shown on this sheet once the re-image disk has been used.